# VERDERFLEX VP2-HT TIMER

Dosing pump system for pools and water treatment

### Description

Peristaltic digital, proportional dosing pump for dosing chemicals with an integrated timer. Wall and foot mounted pumps available. Protection class IP 55. This dosing pump system has a longer engine life and better performance under pressure because of a bearing on the rollers holder.

### Features

- -> Built-in controller for chlorine
- Overdosing time alarm
- Start time delay setting
- Status and programming led alarm
- STAND-BY function to stop dosing
  Priming button for quick
- installation → Default parameter restore option
- → Hose break sensor/alarm
- Level probe sensor input for checking product levels
- On/off switch
- Schuko plug

#### **Function modes**

- Manual: constant
- On/Off: cyclic dosing with programmable delay
- Quantitiy: dosing programmable quantity on every turn on
- Timer dos: dosing at an hourly rate during reception of the enabling signal (ex: flocculant dosage, oxygen, sanitizing)
- Timer: daily and weekly
  programmable dosings

### Display

- Backlit LCD display, 16 x 2 characters
- → 4 Languages
- → Display of flow rate
- Password protected

### Options

- Personalized front
- Three rollers for more accurate dosing
- Temperature sensor input
- Flow sensor input for dosing according to flow
- Alarm relay output

#### **Technical data**

Pump body	PP reinforced with 30% fiberglass	Rolls	Delrin	
Tube	Santoprene	Power	90 - 250 VAC, 50 – 60 Hz	
Fittings	PP ring nuts for tube 4x6 mm			

Model	Max. I/h	Max cc/min	Pressure (bar)	Tube ø mm	Power cons. (Watt)	rpm	Weight (kg)
03-01*	3.0	50	1	5.8 x 9.3	20	20	0.9
06-01*	6.0	100	1	5.8 x 9.3	20	48	0.9
12-01*	12.0	200	1	5.8 x 9.3	20	104	0.9
20-01*	20.0	333.3	1	5.8 x 9.3	20	150	0.9
02-04*	2.0	33.3	4	4.8 x 9.6	20	20	0.9
05-04*	5.0	83.3	4	4.8 x 9.6	20	48	0.9

\* 20% flow rate decreasing on 3 rolls version. Please consult supplier for effects 3 rollers

## VERDER**FLEX**<sup>®</sup>




## VERDERFLEX VP2-HT TIMER

Dosing pump system for pools and water treatment

### Dimensions

(in mm)

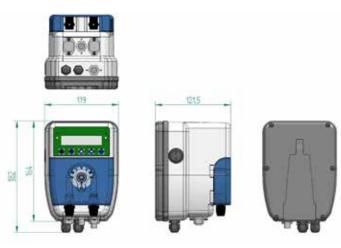

### Standard intallation kit





### Find your local supplier at www.verderliquids.com



### VERDER**FLEX**®



For construction, installation and floor mounting drawings please contact your local authorised Verderflex<sup>®</sup> distributor.