Verderflex Rapide R12



Verderflex Rapide R12 Specifications			
Standard Speeds	93 and 140 RPM		
Control	Inverter Optional		
Rotor Assembly	Anodised Aluminium with Three Nylatron® Rollers		
Voltage	230/400V 50Hz (Single Phase Available to special order)		
Installed Motor Power	0.18 kW 50Hz		
Protection Class	IP55		
Standard Tube Options	Verderprene, Silicone		
Tube Size	15.9 x 4.8 mm		
Weight	12kg		

Flow Rates


Tube	RPM	Flow ml/min	Flow I/hr
15.9 x 4.8	*56	5,600	336
15.9 x 4.8	*70	7,000	420
15.9 x 4.8	93	9,300	558
15.9 x 4.8	140	14,000	840


Nominal pump speed based on 50Hz operation *56 and 70 RPM are a non-standard speed

Flows are typical and were measured with water at 20°C with no suction lift or discharge pressure. Actual flows will vary according to suction conditions, discharge pressure, tube material and production tolerances.


Verderflex Rapide R12



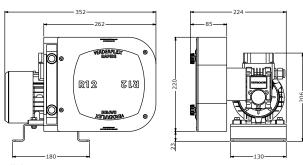

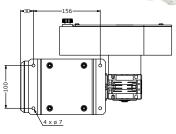

All dimensions are in mm. All dimensions and weights are for guidance only.

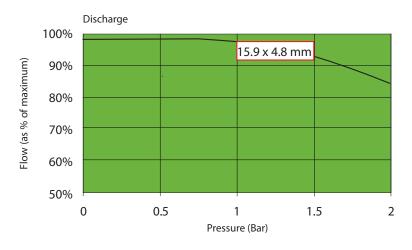



VF_Techno_Rev04_2013_(eu)_Rapide

Find your local supplier at www.verderflex.com



